



Ignition switch contacts list

Contacts Switch Status	A	B	C	D	E
0 stop				○ — ○	
I run	○ — ○				
II start	○ — ○ — ○				