















FRAMEWORK		
PARTS NO.	DESCRIPTION	QTY.
846A080100	Frame	1
846A010200	Guard ring	1
8360453	Seat	1
846A080200	Engine thermal baffle	1
846A080005	Splash plate	1
846A080013	Tool box	1
846A040100	Water, Fuel tank holder	2
846A080009	Throttle pedal base board	1
846A040200	Throttle pedal support	1
846A040001	Throttle pedal	1
846A080008	Clutch pedal base board	1
846A040300	Clutch pedal support	1
8361062	Clutch pedal	1
0598	Light	4
9904	Hour Meter	1
9539	Switch	2
8360464	Battery box	1
0019	Battery	1
8360463	Battery box cover	1
0968	Battery connector	1

POWER SYSTEM		
PARTS NO.	DESCRIPTION	QTY.
	B&S Vanguard 35HP	1
846A030005	Locating ring	1
9155	Key	1
846A030400	Clutch	1
846A030006	Spacer	1
0529	Bolt	1
846A080400	Guard board	1
846A030100	Mounting plate	1
836A030200	Pulley adjustment board	1
846A030003	Tensioner	1
9037	Spring washer	1
9038	Plate washer	1
9036	Nut	1
0249	Belt	3
846A030002	Belt pulley	1
9216	Lock screw	1

OPERATING SYSTEM		
PARTS NO.	DESCRIPTION	QTY.
846A020100	Lever	2
846A020105	Bushing	4
846A020001	Bushing	1
846A020002	Bushing	1
846A020003	Corner shaft	1
846A020004	Shaft	1
846A020005	Shaft	1
846A020200	Rotor plate	1
8361194	Bushing	2
846A020006	Control shaft	2
846A020007	Steering shaft	2
846A020008	Bushing	8
846A020009	Connecting shaft	2
846A020010	Interlock bolt	1
846A020011	Threaded Rod	1
846A020012	Tension rod	1
846A020300	Operating lever, left	1
846A020400	Operating lever, right	1
9035	Grip	2
9702	Hex bolt	4
9500	Oscillating bearing	1
9513	Lock nut	4
9030	Pin	2
9101	Screw	14
9112	Nut	4
9502C	Grease cap	2
9502B	Grease cap	5
9168	Nut	6
9501	Oscillating bearing	5
9513	Lock nut	4
9514	Nut	5
9703	Hex bolt	2
9464	Oscillating bearing	6
9506	Shaft	4
9505	Pin	4

STEERING SYSTEM		
PARTS NO.	DESCRIPTION	QTY.
846A030001	Intermediate shaft	1
846A030002	Belt pulley	1
846A030300	Joint shaft	2
846A030004	Connecting flange	4
9465	Bearing	2
9706	Key	1
9707	Key	2
9701	Hex bolt	16
9023	Lock nut	16
846A050100	Gearbox mounting left	1
846A050200	Gearbox mounting right	1
846A050009	Grease cap connector	1
846A050107	Bushing	4
846A050300	Cross frame	1
846A050001	Rotor shaft	1
846A020004	Shaft	2
9502C	Grease cap	1
9502B	Grease cap	1
846A060001	Gearbox casing left	1
846A060002	Gearbox casing right	1
846A050400	Gearbox frame left	1
846A050500	Gearbox frame right	1
9702	Bolt	2
9703	Bolt	2

BLADE ADJUSTMENT SYSTEM		
PARTS NO.	DESCRIPTION	QTY.
0470	Pitch handle	2
9025	Bearing	2
9157A	Lock pin	2
846A050004	Bushing	2
9022	Spring washer	2
9093	Hex screw	2
4365504	Washer	2
9027	Washer	2
4365503	Pitch Control shaft	2
846A050006	Pitch Control bearing	2
9028	Screw	2
9157	Pin	2
846A050008	Connector	2
9059	Nut	4
846A050005	Shaft	2
846A050007	Draw head	2

GEARBOX ASSY L		
PARTS NO.	DESCRIPTION	QTY.
846A060001	Gearbox casing left	1
846A060003	Gearbox cover	1
846A060100	Bronze gear	1
846A060009	Counter shaft	1
846A060005	Main shaft	1
846A060011	Shimming	1
846A060004	Pressure ring	1
846A060012	Shimming	2
846A060007	Bearing flange	1
846A060008	Bearing flange	1
4364100	Release valve	2
4364007	Countersunk screw	1
9043	Screw	12
9118	Screw	8
9466	Roller bearing	2
9064	Sight Glass	1
9366	Oil Seal	1
9367	O Ring	1
9708	Flat washer	1
9468	Ball bearing	1
9467	Roller bearing	1
9368	Oil Seal	1
9710	Flat washer	1
9156	Woodruff key	1
9053	Plug	2
9709	Straight key	1
9705	Lock screw	6
846A050003	York arm	1
846A050002	Pin, York arm	1
9202	Retainer ring	1
846A070001	Trowel Arm	4
846A070002	Pressure plate cover	1
846A070003	Pressure plate	1
8466000L	Five blade spider plate left	1
846A070004	Spider plate	1
846A070006	Bushing	1
4466006	Lift Lever	4

4466103I	Stabilisor ring	1
4366007	Adjustment screw	4
9540	Lock screw	4
9066	Screw	4
9037	Spring washer	8
9046	Spring washer	4
9059	Nut	8
9067	Screw	4
9068	Screw	1
9069	Grease cap	4
9469	Ball bearing	1
9071 (9040)	Imperial bolt (Metric bolt)	8
9131 (9215)	Imperial bolt (Metric bolt)	4
9072	Plastic plug	4

GEARBOX ASSY R		
PARTS NO.	DESCRIPTION	QTY.
846A060002	Gearbox casing right	1
846A060003	Gearbox cover	1
846A060200	Bronze gear	1
846A060010	Counter shaft	1
846A060006	Main shaft	1
846A060011	Shimming	1
846A060004	Pressure washer	1
846A060012	Shimming	2
846A060007	Bearing flange	1
846A060008	Bearing flange	1
4364100	Release valve	2
9145	Countersunk screw	1
9043	Screw	12
9118	Screw	8
9466	Roller bearing	2
9064	Sight Glass	1
9366	Oil Seal	1
9367	O Ring	1
9708	Flat washer	1
9468	Ball bearing	1
9467	Roller bearing	1
9368	Oil Seal	1

9710	Flat washer	1
9156	Woodruff key	1
9053	Plug	2
9709	Straight key	1
9705	Lock screw	6
846A050003	York arm	1
846A050002	Pin, York arm	1
9202	Retainer ring	1
846A070001	Trowel Arm	4
846A070002	Pressure plate cover	1
846A070003	Pressure plate	1
8466000R	Five blade spider plate right	1
846A070005	Spider plate	1
846A070006	Bushing	1
8366006	Lift lever	4
446103I	Stabilisor ring	1
4366007	Adjustment Bolt	4
9540	Lock screw	4
9066	Screw	4
9037	Spring washer	8
9046	Spring washer	4
9059	Nut	8
9067	Screw	4
9068	Screw	1
9069	Grease cap	4
9469	Ball bearing	1
9071 (9040)	Imperial bolt (Metric bolt)	8
9131 (9215)	Imperial bolt (Metric bolt)	4
9072	Plastic plug	4

WATER & FUEL SYSTEM		
PARTS NO.	DESCRIPTION	QTY.
8361073	Water tank	1
8361073A	Fuel tank	1
B8360731	Mounting plate	1
8361067	Water pump	1
1142	Solenoid valve	1
8361377	Mounting bar	1
8361144	Clamp	1
0754	Plastic pipe	1
9571	Connector	1
0589	Fuel pipe	1
8361440	Switch base	1
1476	Valve	1
1071	Connector	1
9010	Screw	2